

TUNDRA

Inverters

Owner's Manual

MICROWAVE OVEN

MODEL MW700PLUS
WITH DOOR SAFETY LOCK MODE

PART NUMBER: TUN850002
INPUT: 120 V, 60 Hz, 1100 W
MAXIMUM OUTPUT: 700 W
MAGNETRON VOLTAGE: 4.15 kV
MAGNETRON FREQUENCY: 2450 MHz

Read and follow all safety rules and operating instructions in this manual before using this product.

CONTENTS

| | |
|------------------------------|---------|
| ASSISTANCE | 2 |
| IMPORTANT SAFETY INFORMATION | 3 – 6 |
| FEATURES | 7 |
| DOOR SAFETY LOCK MODE | 8 |
| OPERATING INSTRUCTIONS | 8 – 10 |
| AUTO COOK PROGRAMS | 10 – 11 |
| TROUBLESHOOTING | 12 |
| CARE AND MAINTENANCE | 13 |
| WARRANTY | 13 |

2041-A Leonard-De Vinci St., Sainte-Julie, Quebec, Canada J3E 1Z2
Tel: **450.649.2470 / 1.877.964.2582** Fax: **1.888.855.9834**

NEED HELP?

Before calling for service, there are a few things you can do to help us serve you better.

1. **Read this manual:** It contains instructions to help you properly use and maintain your microwave.
2. **If you receive a damaged oven:** Immediately contact your dealer.
3. **Check the “Troubleshooting” section on p. 13** before calling. This section will help you solve the most common problems that might occur.

If you do need service, please contact us!

**Technical Support
450-649-2470 / 1-877-964-2582**

Please take a moment to note model and serial numbers here.

Model number

MW700PLUS with Door lock

Serial number

_____ SERIAL NUMBER IS LOCATED ON THE BACK PANEL NAME PLATE

Date purchased

We suggest that you staple your receipt to this manual.
You will need it to obtain service under warranty.

IMPORTANT SAFETY INFORMATION

READ ALL THE SAFETY INFORMATION BEFORE USING THIS PRODUCT

For your safety, all the information included in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury, or loss of life.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Do not attempt to operate this oven with the door open, as this can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

Do not place any object between the oven, front face and the door and/or allow dirt or cleaner residue to accumulate on sealing surfaces.

Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:

- door (deformation or crack)
- hinges and latches (broken or loosened)
- door seals and sealing surfaces

This oven should never be altered or modified.

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment generates and uses ISM frequencies that may cause interference with radio and television reception. It has been type-tested and found to comply with limits for ISM Equipment pursuant to Part 18 of FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur with your installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Relocate the receivers away from the microwave oven
- Use a shorter extension cord

Tundra International is not responsible for any radio or TV interference caused by this microwave oven.

CAUTION! HOT CONTENT

Cooked or reheated food and their containers can get very hot. Use caution when touching them, and always have dry, clean potholders available for use.



WARNING

To reduce the risk of fire, burns, electric shock, injury to persons or exposure to excessive microwave energy when using your appliance, follow all precautions included in this manual.

SAFETY PRECAUTIONS

- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate this appliance if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not cover or block any openings on the appliance.
- Use this appliance only for its intended use as described in this manual.
- Do not use corrosive chemicals or any products in this appliance that produce explosive vapors.
- This microwave oven is specifically designed to heat or cook food and is not intended for laboratory or industrial use.
- Some products such as whole eggs and sealed containers (e.g. glass jars or canned food) may explode and should not be heated in this microwave oven.
- Do not store this appliance outdoors.
- Do not use this product near water, in a wet environment, near a swimming pool or close to a sink.
- Keep the power cord away from heated surfaces.
- Do not immerse the power cord or plug in water.
- This appliance should only be serviced by qualified service personnel.
- As with any appliance, close supervision is necessary when children are present.

TO REDUCE THE RISK OF FIRE IN THE OVEN: DO NOT OVERCOOK FOOD

- Carefully attend the appliance if paper, plastic or other combustible materials are placed inside the microwave oven while cooking.
- Remove wire twist ties and metal handles from containers before placing them in the oven.
- Do not use the microwave oven for storage purposes.
- Do not leave paper products, cooking utensils or food in the microwave oven when not in use.
- Do not use the microwave oven to dry newspapers.
- If materials inside the microwave oven should ignite, keep the door closed, turn the oven off, and disconnect the power from the input source. If the door is opened, the fire may spread.

ARCING

Arcing is the scientific term for sparks in the oven. Arcing is caused by:

- Metal or foil touching the side of the oven
- Foil not molded to food (upturned edges act like an antenna)
- Metal, such as twist ties, poultry pins, or gold-rimmed dishes
- Recycled paper towels containing small metal particles

IF YOU SEE ARCING, PRESS THE **STOP/CANCEL** BUTTON TO STOP THE MICROWAVE OVEN.

FOOD RECOMMENDATIONS

- Only use popcorn labeled for use in microwave ovens or a certified microwave oven-safe accessory dish.
- Some products, such as whole eggs (with shell), sealed containers and closed jars, will explode and should not be heated in this microwave oven. Heating these products in the microwave oven could result in injury.
- Do not boil eggs in a microwave oven. Pressure will build up inside the egg yolk and will cause it to burst. This can result in possible injury.
- Operating the microwave oven with no food inside for more than one-minute increases the heat around the magnetron. This may cause damage to the microwave oven, start a fire and/or shorten the life of the oven.
- Foods with unbroken outer “skin” such as potatoes, sausages, tomatoes, apples, chicken livers, egg yolks and any similar food should be pierced before cooking to allow steam to escape during cooking.

SUPERHEATED WATER OR BABY FOOD

Microwaved water and other liquids do not always bubble when they reach their boiling point. They can get superheated and not bubble at all.

To prevent spontaneous boiling and possible injury from splashing liquid, we recommend the following:

Superheated liquid can start bubbling up when moved or when something like a. To prevent this from happening as well as possible injury, do not heat any liquid for more than 2 minutes per cup.

- Before removing a container from the microwave oven, allow it to stand in the oven for 30 to 40 seconds.
- Before plunging a spoon or tea bag into heated hot water, allow it to stand in the oven for 30 to 40 seconds.
- Avoid heating baby food in glass jars, even with the lid off.
- Make sure all infant food is thoroughly cooked.
- Always test before feeding your baby.
- Stir food to distribute the heat evenly before serving. The container may feel cooler than the food or milk really is.
- In the case of containers such as soft drink bottles, wine flasks and narrow-necked coffee cups: even if the container is already open, excessive steam can nevertheless build up. cause it to burst or overflow and cause injuries.
- Do not defrost frozen beverages contained in narrow-necked bottles (especially carbonated beverages). Even if the container is open, pressure can build up and this can cause the container to burst.
- Hot foods and steam can cause burns. Be careful when opening any container of hot food, including popcorn bags, cooking pouches and boxes. To prevent possible injury, direct steam away from hands and face.
- Do not overcook potatoes. They could dehydrate, catch fire, and cause damage to your oven.
- Cook meat to an internal temperature of at least 160°F (71.1°C). Cooking to this temperature usually protects against foodborne illness.

CHILD LOCK



This safety feature prevents unsupervised operation by children. To set: Press and hold **STOP / CANCEL** for 4 seconds until - - - is displayed. To cancel: Press and hold **STOP / CANCEL** for 4 seconds.

MICROWAVE-SAFE COOKWARE

Make sure any cookware used in your microwave oven is labeled “microwave-safe” or suitable for microwave cooking. Most glass casserole dishes, measuring cups and china dinnerware which do not have a metallic trim sheen can be used.

- If you use a meat thermometer while cooking, make sure it is safe for use in microwave ovens.
- Do not use recycled paper products. Recycled paper towels, napkins and waxed paper can contain metal flecks which may cause arcing or ignition. Paper products containing nylon or nylon filaments should be avoided as well, as they may also ignite.
- Not all plastic wrap is suitable for use in microwave ovens. Check the package for proper use.
- Some Styrofoam trays (like those used for meat packaging) have a thin strip of metal embedded in the bottom. When microwaved, the metal can burn the floor of the microwave oven or ignite other parts of it.
- Cookware may become hot because of heat transferred from the heated food. Potholders are recommended for handling cookware.
- “Boilable” cooking pouches and tightly closed plastic bags should be slit, pierced or vented, as directed on most packages. If they are not, plastic could burst during or immediately after cooking, resulting in possible injury. Also, plastic storage containers should be at least partially uncovered to avoid pressure build-up. When cooking with containers tightly covered with plastic wrap, remove covering carefully and direct steam away from hands and face.
- Paper towels, waxed paper and plastic wrap can be used to cover dishes to retain moisture and prevent splattering. Be sure to leave a vent to allow steam to escape.


NORMAL SITUATIONS YOU MAY ENCOUNTER

- Outside of oven may feel warm
- Steam may escape from oven
- Change in interior light intensity and change in blower sound when lower power setting is used

NONE OF THE ABOVE INDICATE A MALFUNCTIONING MICROWAVE.

FEATURES


- 1) Door safety lock
- 2) Oven window: screen allows cooking to be viewed while keeping microwave energy confined in oven.
- 3) Microwave filter (waveguide)
- 4) Turntable rotator
- 5) Turntable roller ring
- 6) Turntable plate
- 7) Control Panel

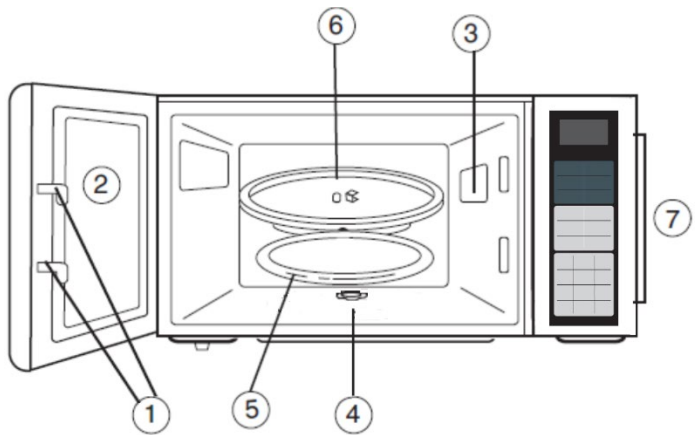

Note: Turntable rotator, roller ring and plate must be in place when using the oven.

CONTROL PANEL (Overview)

- **DISPLAY**
Displays time, cooking time and codes.
- **AUTO COOK PROGRAMS**
Instant cooking settings: Potato, Popcorn, Pizza, Beverage, Frozen Dinner, Reheat.
- **CLOCK**
To set time of day.
- **TIME COOK**
To set cooking time.
- **TIMER**
To set timer.
- **TIME DEFROST**
To set defrost time.
- **WEIGHT DEFROST**
To defrost by weight.
- **POWER**
To set power level.
- **KEYS 0-9**
To set time, and cooking time.
- **KEY 0**
To unlock the door.
- **STOP / CANCEL**
To stop cooking.
To unlock the door.
- **START / + 30 sec.**
To start cooking
To add 30 sec. of cooking time.

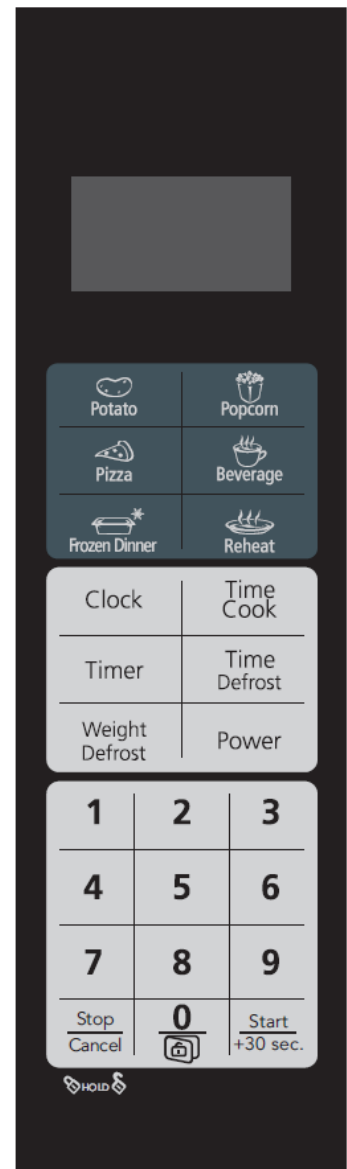

SAFETY DOOR LOCK MODE (ENABLED BY DEFAULT)

This appliance is equipped with a safety door lock mode to prevent the handling of hot food containers and reduce the risk of accidental scalding.



WHEN COOKING STARTS, THE DOOR LOCKS AUTOMATICALLY AND REMAINS LOCKED FOR UP TO 30 MINUTES AFTER THE END OF THE SELECTED PROGRAM.



TO OPEN THE DOOR AFTER USING THE MICROWAVE OVEN PRESS THE “0” KEY OR THE “STOP/CANCEL” KEY.

Note: The safety door lock mode can be turned off or on according to your needs.

To **deactivate** the door lock mode:

1. Press and hold the “0” key for 4 seconds: a short beep sounds.
2. Press the “7” key, then the “9” key: a long beep sounds.
3. “ULoc” appears on the display, confirming that the door lock mode has been turned off.

To **activate** the door lock mode:

1. Press and hold the “0” key for 4 seconds: a short beep sounds.
2. Press “7” then “9”: a long beep sounds.
3. “Loc” appears on the display, confirming that the door lock mode has been turned on.

The safety door lock mode is stored in memory until the setting is changed.

OPERATING INSTRUCTIONS

KEYPAD LOCK MODE (DISABLED BY DEFAULT)

This appliance is equipped with a keypad lock mode to prevent the microwave oven from being used by vulnerable people. It can be turned off or on according to your needs.

To **activate** the keypad lock mode:

- 1- Press and hold the “Stop/Clear” key for 4 seconds: a short beep sounds.
- 2- The “- - -” symbol appears on the display, confirming that the keypad lock mode has been turned on.

When using the keypad in lock mode, a double beep sounds and the symbol “- - -” appears on the display.

To **deactivate** the keypad lock mode:

- 1- Press and hold the “Stop/Clear” button for 4 seconds: a short beep sounds.
- 2- The time is shown on the display, confirming that the keypad lock mode has been turned off.

Caution: If the device is unplugged or the power supply has failed, the keypad lock mode is automatically deactivated.

SETTING THE CLOCK

- Press CLOCK once and the display will start blinking.
- Select 12hr or 24hr by pressing the CLOCK button (e.g. 12hr for 3:05PM / 24hr for 15:05PM)
- Press the numeric keypad keys to enter the exact time.
- Press CLOCK again to confirm the selected time.

USING THE TIMER

Timer works independently from cooking and can be set at any time for various tasks.

- Press TIMER and enter the amount of time you wish to set by using the numeric pad. Digital time is in minutes and seconds (e.g. 530 for 5 minutes and 30 seconds).
- Press START to initiate the countdown.
- The display will switch from timer countdown to current time after 5 seconds. To display the remaining time, press TIMER.
- To stop the timer, press STOP.
- When the timer reaches its time limit, one long beep will be emitted.

The timer can be used while cooking, but this is not recommended. It could interfere with your interpretation of the remaining cooking time, which could lead to your food burning.

SETTING COOK TIME

Press the TIME COOK key and enter the desired cooking time using the numeric keypad. The time is displayed in minutes and seconds (e.g. 3:30 for 3 minutes and 30 seconds).

SETTING COOKING POWER

The default setting is 100% of output power. To change the cooking power, you must set the desired time using the numeric keypad and then press the POWER button repeatedly until the desired power is displayed.

| | | | | | | | | | | |
|-------|------|------|------|------|------|------|------|------|------|------|
| P-100 | P-90 | P-80 | P-70 | P-60 | P-50 | P-40 | P-30 | P-20 | P-10 | P-00 |
| 100% | 90% | 80% | 70% | 60% | 50% | 40% | 30% | 20% | 10% | 0% |

DEFROST BY WEIGHT

Defrosting by weight automatically sets microwave oven power for quickest thawing of small to medium amounts of food. Because this function works in conjunction with the food's weight, you must know its weight before starting to cook.

- Press WEIGHT DEFROST.
- Enter weight in ounces / from 4 to 64
- Press START / 30 sec. to initiate defrosting.

Note: During defrosting, the system will automatically pause and beep three times to remind you to turn your food over. Press the STOP button to unlock the door and turn your food over. Then, press the START button to continue defrosting.

At the end of the total defrosting time, 4 long “beeps” will sound, and the word “END” will be displayed. Press the STOP button to unlock the door and remove your food.

AUTO COOK PROGRAMS

This microwave oven has 6 Auto Cook Programs to reheat popular foods automatically (without entering power level or time). Follow the instructions for each program to obtain best results.

Note: Preset cooking times may not be appropriate for your type or amount of food. Always be careful when using any of these functions to avoid burning your food or damaging the microwave oven.

POTATO

The POTATO Auto Cook Program setting allows you to easily set the microwave to cook a variety of potatoes. A built-in standing time helps equalize the potatoes' temperature during the cooking process.

- Press BAKED POTATO.
- Enter how many potatoes to be cooked, between 1 and 2.
- Press START.

POPCORN

The POPCORN Auto Cook Program is preset at 3 minutes and 10 seconds to cook a 3.5 oz. bag of microwave popcorn. We recommend always supervising popcorn as it pops. Cooking must be stopped when pops slow down to 3 seconds apart.

To cook popcorn:

- Press POPCORN.
- Press START.

PIZZA

The PIZZA Auto Cook Program is very useful to reheat single servings of leftover cooked pizza or a whole frozen pizza.

- Press the PIZZA button once for a 6oz slice
- Press the PIZZA button twice for an 11oz slice
- Press the PIZZA button three times for a 16oz pizza
- Press the START button to start cooking.

BEVERAGE

The BEVERAGE Auto Cook Program is programmed for three different sizes of hot beverages.

- Press the BEVERAGE button for a small or medium beverage.
- Press the BEVERAGE button twice for a large beverage
- Press the BEVERAGE button three times for multiple beverages
- Press the START button to start cooking.

FROZEN DINNER

The FROZEN DINNER Auto Cook Program is very useful to easily cook your favorite single-serving entrees and dinners. This program is specially designed to sequence power levels and allow standing time to better cook a wide variety of frozen foods. For this reason, cooking time may take slightly longer than the microwave preset time.

- Press the FROZEN DINNER button once or twice to select the weight of the dish to be reheated:
9 or 18oz
- Press the START button to start cooking.

REHEAT

The REHEAT Auto Cook Program is preset to reheat a great variety of foods.

- Press the REHEAT button successively to select the weight of the dish to be reheated:
7 – 11 – 14 – 18 – 21 – 25 and 28oz
- Press the START button to start cooking.

TROUBLESHOOTING

| Problem | Solution |
|---|--|
| The oven causes TV interference. | Some radio and TV interference may occur when you cook with the microwave oven. This interference is like the interference caused by small appliances such as mixers, vacuums, hair dryers, etc. It does not indicate a problem with the oven. |
| Steam accumulates. | While cooking, food gives off steam and warm air. Most of the steam and warm air will be removed by air circulating inside and outside the oven. However, some steam may condense on cooler surfaces such as the oven door. This is normal. After use, the oven should be wiped dry. |
| The oven does not turn on. | <p>The oven is not plugged in securely or needs to be reset. Remove plug from the outlet, wait ten seconds, and plug again.</p> <p>Main circuit breaker or main fuse is tripped. Reset main circuit breaker or replace main fuse.</p> <p>There is a problem with the outlet. Plug another appliance into the outlet to check if it is working.</p> |
| The oven does not start cooking. | <p>The door is not completely closed. Close the oven door properly.</p> <p>START was not pressed after programming. Press START.</p> <p>Another program has already been entered. Press STOP / CANCEL to cancel the previous program or disconnect the microwave from the power source to reset all its functions.</p> |
| The turntable plate wobbles. | The glass plate is not positioned properly on the roller ring or there is food under it. Remove, clean and reinstall. |
| When the oven is operating, the glass tray makes noise. | The roller ring and oven bottom are dirty. Remove, clean and reinstall. Clean according to Care and Maintenance (see page 13). |
| The "Loc" icon appears in the display. | The DOOR SAFETY LOCK MODE is activated. Press O or STOP to open the door. If the oven is hot, the Loc warning may remain ON for up to 30 minutes. |

CARE AND MAINTENANCE

- Always turn off the oven and remove the power plug from the wall socket before cleaning.
- Keep the inside of the oven clean. Wipe food spills with a damp cloth using mild detergent.
- Avoid industrial sprays and other harsh cleaners, as they may stain, streak or dull the door and other microwave surfaces.
- To prevent damage to the operating parts inside the oven, water should not seep into the ventilation openings.
- Outside surfaces should be cleaned with slightly damp cloth (not wet).
- To clean door surfaces, only use mild, non-abrasive soaps or detergents applied with a soft cloth.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth.
- When cleaning the control panel, leave the door open to prevent the oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth.
- To clean the turntable plate and roller ring, remove them from the microwave oven and wash them in warm water with dish soap or in the dishwasher.
- When removing the roller ring from the microwave, make sure to replace it in the proper position.
- To remove odors from the microwave oven, combine a cup of water with the juice and skin of one lemon in a deep bowl, and cook at full power for 3 minutes. Wipe thoroughly any excess humidity with a dry, soft cloth.
- Please contact your retailer to have the oven light replaced.

LIMITED WARRANTY

TUNDRA INTERNATIONAL warrants its products against defects in material or workmanship for a period of one (1) year from the date of purchase. This warranty applies to the original purchaser (end user) of the product only. This limited warranty is void if the unit is abused, modified, installed improperly or if there is a lack of maintenance. Tundra International is not liable for any incidental, consequential or other damage arising from the use, misuse or operation of this product, including, without limitation, damage resulting from loss of use, cost of removal, installation, or troubleshooting of the customer's electrical systems.

TO BE ELIGIBLE FOR WARRANTY:

- The product must never have been abused or modified.
- The product must never have been exposed to liquids, heavy dust or corrosive materials.
- Shipping-related damages are not covered by the warranty.

FOR ASSISTANCE, CONTACT US AT 450-649-2470 or 1-877-964-2582.

2041-A Leonard-De Vinci St., Sainte-Julie, Quebec, Canada J3E 1Z2